



PiPAD™ Lite ASM1900152-

Scan the QR code to visit our installation guides or www.raspberrypiplastics.com



Software install:

1. Make sure you have followed the Raspberry Pi foundation's instruction to install the latest OS to your SD card:

HTTPS://www.raspberrypi.org/software/

Once the OS is installed you should confirm it's up to date. To do this Open terminal on Pi and type:

sudo apt update

This should update your OS to the latest revision, Reboot your Pi.

Once restarted again open terminal and type the following:

sudo nano /boot/config.txt

Now add the following two lines to the bottom of the config.txt file:

dtoverlay=gpio-poweroff,gpiopin=18,active_low=0
dtoverlay=gpio-shutdown,gpio_pin=17,active_low=1,gpio_pull=up

Save the file and reboot.

To start your Pi:

Press the STAND-BY button >1 sec.

LED ring goes GREEN

Shut down

Press the STAND-BY button >3 sec.

LED ring flashes RED

Forced Shut down

Press the STAND-BY button >10 sec.

LED ring flashes RED

E-mail: info@oneninedesign.co.uk



