 
 
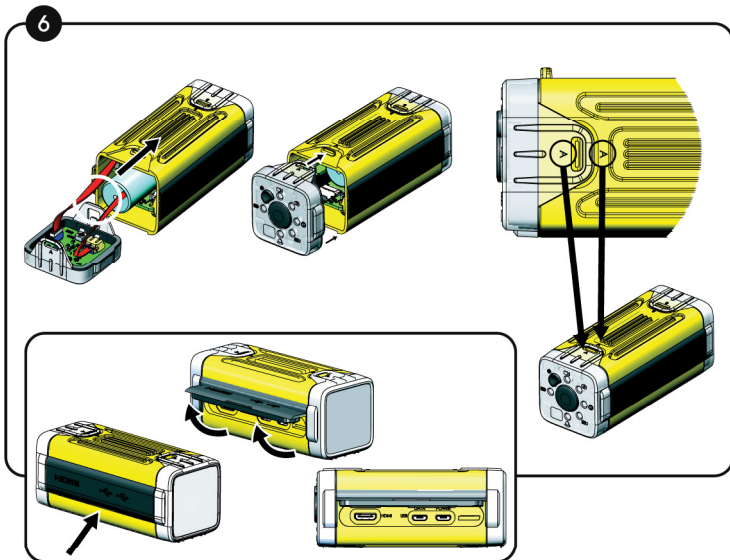 
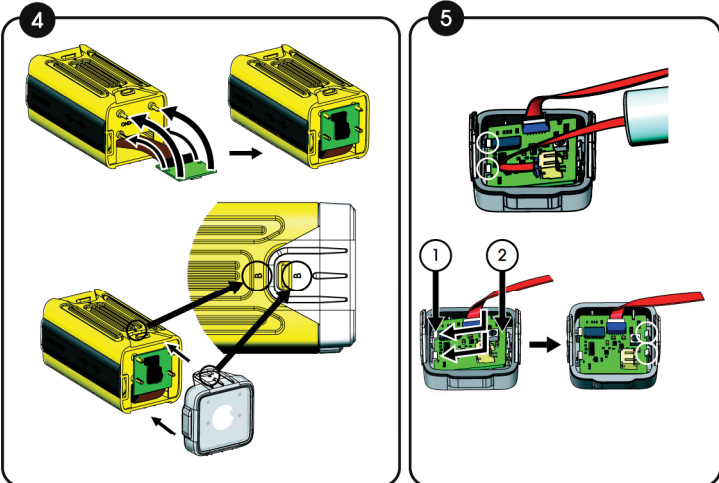 


ActionCAM

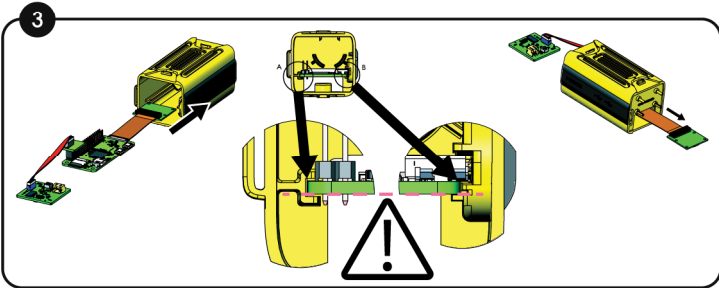

Assembly Instructions

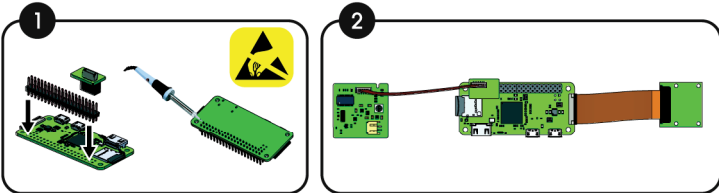

Instruction videos can be found here:

Please scan the QR codes below with your smartphone or tablet camera to be directed to the instructional videos.

Assembly Instructions



Power Up & Operation



European Declaration of Conformity

We the undersigned, declare that this Declaration of Conformity is issued under our sole responsibility and belongs to the object listed below;

ActionCAM

The object of this declaration is in conformity with the following EU harmonised legislation;

**Radio Equipment Directive (RED) 2014/53/EU
RoHS Directive 2011/65/EU**

The following harmonised standards and technical specifications have been applied;

RED Article 3.2 (Radio)

EN 300 328 V2.1.1, Wideband transmission systems; Data transmission equipment operating in the 2,4 GHz ISM band and using wide band modulation techniques

RED Article 3.1.b (EMC)

EN 301 489-1 V2.1.1, Common Technical Requirements
EN 301 489-17 V3.1.1, Broadband Data Transmission Systems

RED Article 3.1.a (Safety)

EN 60950-1:2006/A2:2013, Information Technology Equipment - Safety - Part 1: General requirements
EN 62311:2008, Assessment of electronic and electrical equipment related to human exposure restrictions for electro magnetic fields

RoHS

EN 50581:2012, Technical documentation for the assessment of electrical and electronic products with respect to the restriction of hazardous substances

Product specification can change without prior notice.

WARNING:

This product contains a Li-ion battery (with integrated protection module). DO NOT incinerate or place near an open flame.


One Nine Design Ltd. Pencoed Technology Park, Pencoed, Bridgend, CF355HZ

OND-1900204-01




Your ActionCAM

- 1 Power/Mode button
- 2 Capture button
- 3 Video mode
- 4 Camera mode
- 5 Timelapse mode
- 6 Slow motion mode
- 7 User programmed mode
- 8 Battery indicator light

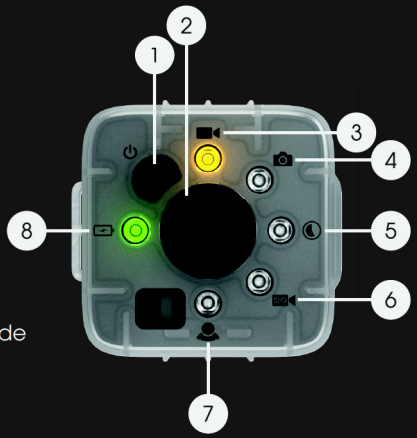

Connecting To The Network

- 1 Power on the ActionCAM by pressing and holding the power button.

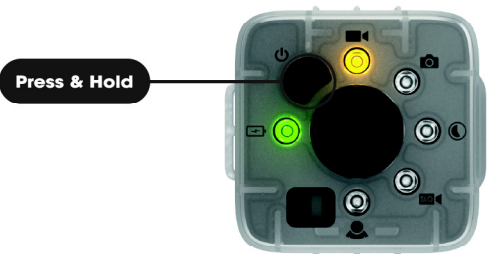

- 2 Find the ActionCAM wifi access point on your smartphone/tablet/pc, it will show up in your available wifi networks list.




- 3 Click ActionCAM to connect and enter the password: **onenine19** to join the wifi access point.

* The ActionCAM may require restarting after the first boot before the wifi access point becomes available.


Accessing The Camera Preview

- 1 **Ensure your computer/laptop/smartphone/tablet is connected to the ActionCAM wifi. (see connecting to the network).
- 2 Open the web browser on your device (computer/laptop/smartphone/tablet).
- 3 In the address bar enter the following:
http://actioncam:8080
or on some devices you may need to enter:
http://192.168.8.1:8080

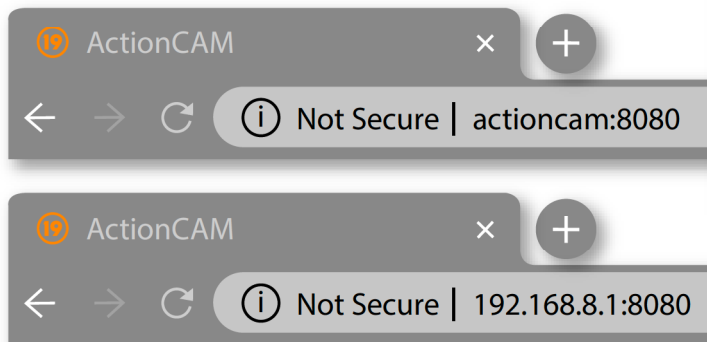

- 4 This will open the ActionCAM camera preview page in your browser.


To activate the live preview please tap or click the text. Each time the camera mode is changed you will need to reactivate the live preview when prompted.

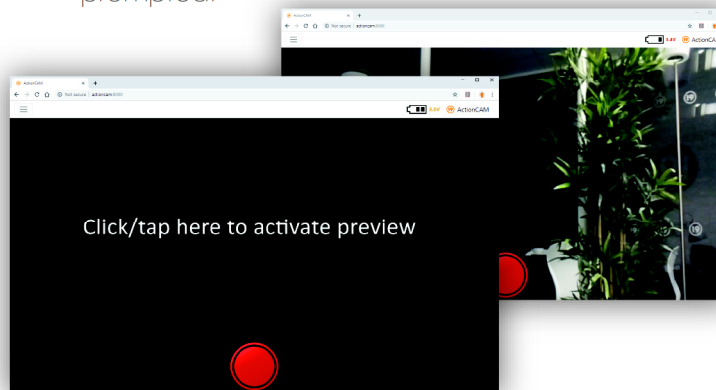


**Ensure network discovery and sharing is enabled on your computer or device.

Accessing Your Files

- 1 Ensure you're connected to your ActionCAM wifi.
- 2 Open file explorer (on Windows) or Finder (on Mac) and navigate to: `network/actioncam/share...`

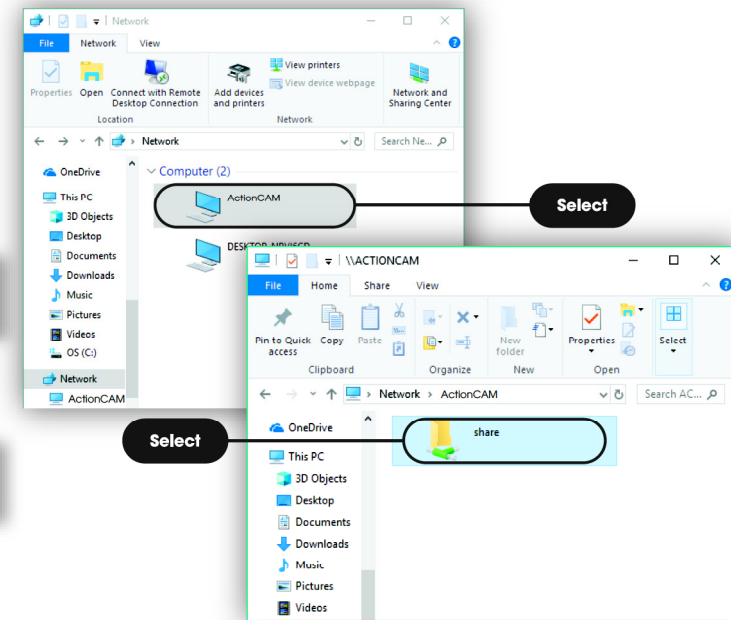

- 3 Copy your files from the /share directory to a location on your computer

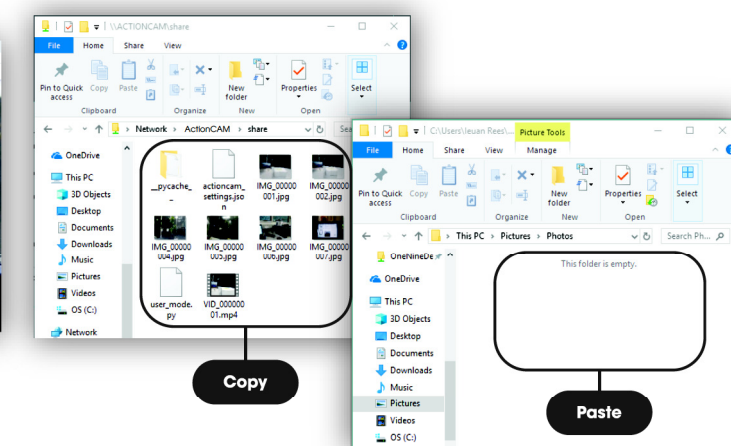

* The ActionCAM may require restarting after the first boot before the wifi access point becomes available.